

This document provides additional assistance with wiring your Extron IP Link enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific Extron IP Link enabled product or the controlled device manufacturer supplied documentation.

---

***Device Specifications:***

Device Type: Video Projector  
Manufacturer: Eiki  
Firmware Version: N/A  
Model(s): LC-XIP2000

***Version History:***

Driver Version	Date	IP Link Compiler	G C Version	Notes
2	6/28/2010	1.4.0	3.0.3	Updated inputs. Added MLC62 support.
1	5/11/2007	1.0.9.3	2.2	Initial version.

***Driver Notes:***

# IP Link<sup>™</sup> Device Interface Communication Sheet

## Control Commands & States:

<b>Audio Mute</b>	Off/On		
<b>Auto Image</b>	Execute		
<b>Freeze</b>	Off/On		
<b>Input</b>	Computer 1 S- Video	Computer 2 Component	Video
<b>Power Control</b>	On	Off	
<b>Video Mute</b>	On	Off	
<b>Volume (Step)</b>	Up	Down	

## Status Available:

<b>Connection Status</b>	Connected		Disconnected
<b>Input</b>	Computer 1 S- Video	Computer 2 Component	Video
<b>Lamp Usage</b>	Hours		
<b>Power Control</b>	On	Off	
<b>Power Status</b>	On Warming Up	Off Status Unavailable	Cooling Down

## MLC62 Supported Commands:

<b>Audio Mute</b>	Off/On		
<b>Auto Image</b>	Execute		
<b>Freeze</b>	Off/On		
<b>Input</b>	Computer 1 S- Video	Computer 2 Component	Video
<b>Power Control</b>	On	Off	
<b>Video Mute</b>	On	Off	
<b>Volume (Step)</b>	Up	Down	

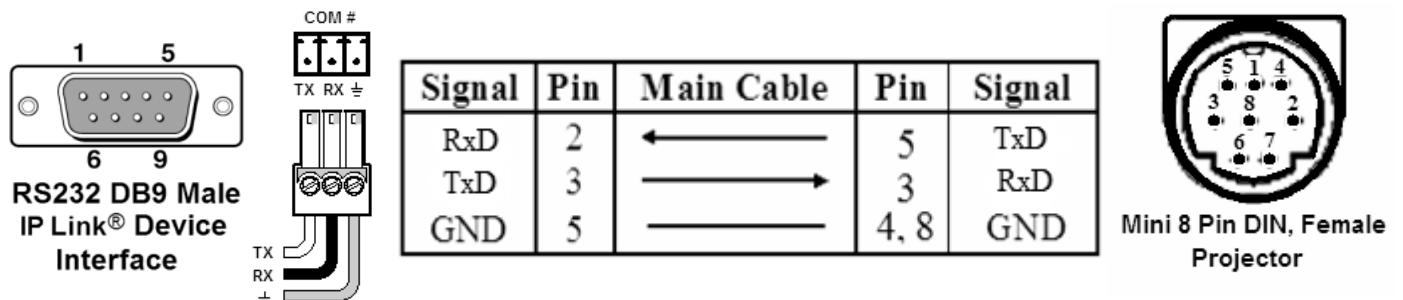
**Cable and Adapter Requirements:**

Use control adapter Mini 8 Pin DIN to DB9 Serial Cable that is supplied with projector.

**Notes for the Device:****Serial communication:**

**Port Type:** RS-232  
**Baud Rate:** 19200  
**Data Bits:** 8

**Parity:** None  
**Stop Bits:** 1  
**Flow Control:** None

**Pin Assignments Diagram:**

Note: Captive screw connector may also be used as a serial connection.

**General Notes:**